

Error Message

| Message on the display: | Declaration: | | | | |
|---|--------------|----|--------|-----------|--|
| <table border="1"> <tr> <td>GOLDOR BAIT</td> <td>xE</td> </tr> <tr> <td>0,75 m</td> <td>10,0kg/ha</td> </tr> </table> | GOLDOR BAIT | xE | 0,75 m | 10,0kg/ha | <p>xE = The 7 pin plug is not connected with the control panel</p> |
| GOLDOR BAIT | xE | | | | |
| 0,75 m | 10,0kg/ha | | | | |
| <table border="1"> <tr> <td>GOLDOR BAIT</td> <td>↓E</td> </tr> <tr> <td>0,75 m</td> <td>10,0kg/ha</td> </tr> </table> | GOLDOR BAIT | ↓E | 0,75 m | 10,0kg/ha | <p>↓E = The 7pin plug is connected but there is no speed signal arrow down = Hydraulic is down ↑ arrow up = Hydraulic is up</p> |
| GOLDOR BAIT | ↓E | | | | |
| 0,75 m | 10,0kg/ha | | | | |
| <table border="1"> <tr> <td>GOLDOR BAIT</td> <td>↓O</td> </tr> <tr> <td>0,75 m</td> <td>10,0kg/ha</td> </tr> </table> | GOLDOR BAIT | ↓O | 0,75 m | 10,0kg/ha | <p>O = O circumferential = The speed signal is under 1,5 km/h O circumferential and flashing = The speed signal is correct more than 1,5 km/h.</p> |
| GOLDOR BAIT | ↓O | | | | |
| 0,75 m | 10,0kg/ha | | | | |
| <table border="1"> <tr> <td>GOLDOR BAIT</td> <td>xR</td> </tr> <tr> <td>0,75 m</td> <td>10,0kg/ha</td> </tr> </table> | GOLDOR BAIT | xR | 0,75 m | 10,0kg/ha | <p>xR = x = no magnet sensor is connected with the control panel. R = no wheel sensor is connected with the control panel or there is no signal from the wheel sensor.</p> |
| GOLDOR BAIT | xR | | | | |
| 0,75 m | 10,0kg/ha | | | | |
| <table border="1"> <tr> <td>GOLDOR BAIT</td> <td>xO</td> </tr> <tr> <td>0,75 m</td> <td>10,0kg/ha</td> </tr> </table> | GOLDOR BAIT | xO | 0,75 m | 10,0kg/ha | <p>xO = x = no magnet sensor is connected with the control panel. O circumferential = no signal from the wheel sensor or the speed signal is lesser than 1,5 km/h</p> |
| GOLDOR BAIT | xO | | | | |
| 0,75 m | 10,0kg/ha | | | | |