




## Wheel sensor installation instructions

Attach the wheel sensor to one front wheel of your vehicle.



Connect the wheel sensor with the 5-pin cable on the control unit.

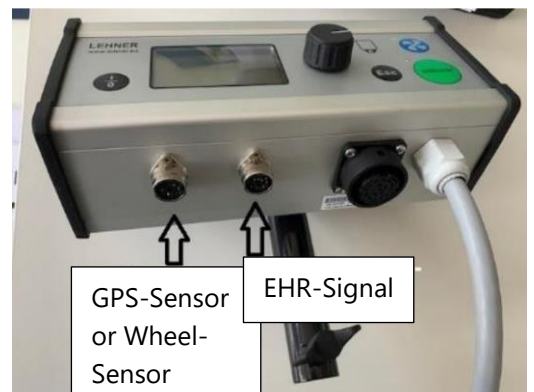

To generate a signal, the sensor only requires a rotating metal component (in this case the wheel bolts). At least 6 pulses per meter (600 pulses/100m) should be generated in order to display an accurate speed.

