

LEHNER SuperVario® Baffle Plate "adjustable" Assembly Instructions


To fit the baffle on your SuperVario® Spreader, please proceed as follows:

- 1. Remove the hopper of your SuperVario® and remove the cover plate (water blue) of the slide unit.
- 2. To be able to attach the baffle plate, the Edge protection on the frame can be partially removed. To do this, cut it at the front of the Spreader frame so far that the baffle plate sits directly on the frame. (Front complete approx. 4 cm after above see attached picture)
- 3. Remove the water-blue baffle plate (impact plate) on the left Side and mount the supplied smaller shaped sheet with the two holes on the left side of your Spreader, thus the distance between the frame and the guide plate closed is.
- Place the baffle plate on the frame and mark drill holes using the two fastening struts on the frame.
 The holes must be drilled with 7 mm so supplied M 6 pass through. The holes are already on new machines provided so that no more holes must be drilled.
- 5. Mount the baffle plate on your spreader.
- 6. Attach the larger of the supplied shaped sheets on the right side of the baffle. The sheet is on the inside at the holes provided for this purpose to screw tight.



Löcher bohren / drill holes Blech montieren! / Mount sheet metal!



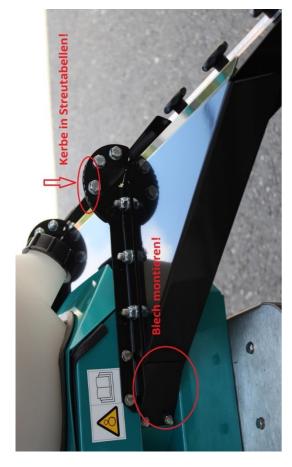

Blech montieren! / Mount sheet metal! Kerbe in Streutabellen! / Notch in spreading chart



Blech montieren! / Mount sheet metal!

Baffle settings "adjustable"	s "adjust	table"							LEHNER SuperVario®	/ario®
				/iterra®	Viterra® rapeseed	ed				
Delivery height: 1.00 m Last updated: 08/2016	0 m Last updat	ted: 08/2016		47% ph	acelia/24%	flax/19% Pe	rsian clover	'10% Alexa	47% phacelia/24% flax/19% Persian clover/10% Alexandrine clover	
			Vane	etting (vane	Vane setting (vane from left to right)	ht)				
Working width	rpm	Vane 1	Vane 2	Vane 3	Vane 4	Vane 5	Vane 6	Notch	Casting blade 1	Casting blade 2
2.0 m	800	2	14	24	64	77	88	5	Hole 4.0	Hole 4.0
2.5 m	006	2	14	24	64	77	88	6	Hole 4.0	Hole 4.0
3.0 m	1000	2	14	24	64	27	88	6	Hole 4.0	Hole 4.0
3.5 m	1500	2	14	24	64	27	88	7	Hole 5.0	Hole 5.0
4.0 m	1800	2	14	24	64	22	88	8	Hole 5.0	Hole 5.0
km/h			9	8	10	12	15			
Output rate 15 kg/ha										
Slide opening 2.0 m			21	23	24	26	27		543	
Slide opening 2.5 m			22	24	26	27	31	1	1	41
Slide opening 3.0 m			23	25	27	30	32			-
Slide opening 3.5 m			24	26	28	31	33	-	10/0	
Slide opening 4.0 m			25	27	29	32	34	- 2	3 4 5	1
Please note that these are guide values.	guide values.									
These settings must be checked and, if necessary, adjusted by means of a field test.	necked and, if nec	essary, adjusted	by means of a	field test.						©LEHNER



Baffle settings "adjustable"	s "adiust	table"							LEHNER SuperVario®	ario®
			Vite	rra® Fa	Viterra® Fast green mix	in mix				
Delivery height: 1.00 m Last updated: 07/2015	0 m Last updat	ted: 07/2015	58% ALB	ATROS whi	te mustard/;	23% Alexand	Irine clover/	19% ENER	58% ALBATROS white mustard/23% Alexandrine clover/19% ENERGY Sarepta mustard seed	ustard seed
			Vane	setting (vane	Vane setting (vane from left to right)	ht)				
Working width	rpm	Vane 1	Vane 2	Vane 3	Vane 4	Vane 5	Vane 6	Notch	Casting blade 1	Casting blade 2
2.5 m	006	2	14	24	67	77	88	4	Hole 2.5	Hole 2.5
3.0 m	1500	2	14	24	67	27	88	5	Hole 2.0	Hole 2.0
3.5 m	1900	2	14	24	67	77	88	6	Hole 2.0	Hole 2.0
4.0 m	2200	2	14	24	67	22	88	7	Hole 2.0	Hole 2.0
km/h			9	8	10	12	15			
Output rate 15 kg/ha									5432	9
Slide opening 2.5 m			18	20	22	24	27	1		-
Slide opening 3.0 m			17	19	21	23	26			~
Slide opening 3.5 m			18	20	22	24	27	-	101	
Slide opening 4.0 m			19	21	23	25	28	CV.	3 4 0	
Please note that these are guide values.	guide values.									
These settings must be checked and, if necessary, adjusted by means of a field test.	recked and, if nece	essary, adjusted I	by means of a	field test.					_	©LEHNER



<u>Baffle settings "adjustable"</u>	<u>as "adjusi</u>	<u>table"</u>						LE	LEHNER SuperVario®	/ario®
			Vit	erra® U	Viterra® Universal mix	ll mix				
Delivery height: 1.00 m Last updated: 07/2015	0 m Last updat	ted: 07/2015			15% raw oa	15% raw oats/37% Alexandrine clover/48% phacelia	andrine clov	er/48% ph	acelia	
			Vane	setting (vane	Vane setting (vane from left to right)	ht)				
Working width	rpm	Vane 1	Vane 2	Vane 3	Vane 4	Vane 5	Vane 6	Notch	Casting blade 1	Casting blade 2
2.5 m	1800	5	12	22	65	62	88	4	Hole 3.5	Hole 3.5
3.0 m	1900	5	12	22	65	62	88	5	Hole 2.5	Hole 2.5
3.5 m	2000	5	12	22	65	62	88	7	Hole 2.5	Hole 2.5
4.0 m	2100	2	12	22	65	62	88	8	Hole 3.0	Hole 4.0
				c	4	ę	ť			
km/h			9	œ	10	12	15			
Output rate 25 kg/ha									5432	
Slide opening 2.5 m			40	43	46	55	58		5	
Slide opening 3.0 m			41	44	49	56	61			-
Slide opening 3.5 m			43	46	55	59	64	-	1 0%	
Slide opening 4.0 m			45	48	57	61	67	N	3 4 5	
Please note that these are guide values.	e guide values.]		
These settings must be checked and, if necessary, adjusted by means of a field test.	hecked and, if nec	essary, adjusted	by means of a	field test.						©LEHNER
					1					



Baffle settings "adjustable"	<u>s "adjust</u>	table"							LEHNER SuperVario®	/ario®
			Pha	celia-bu	Phacelia-buckwheat mix	at mix				
Delivery height: 1.00 m Last updated: 07/2015	0 m Last updat	ted: 07/2015			5	50% phacelia/50% buckwheat	a/50% buck	wheat		
			Vane	setting (vane	Vane setting (vane from left to right)	ht)				
Working width	rpm	Vane 1	Vane 2	Vane 3	Vane 4	Vane 5	Vane 6	Notch	Casting blade 1	Casting blade 2
2.5 m	1000	4	12	22	68	78	86	3	Hole 3.5	Hole 3.5
3.0 m	1500	4	12	22	68	78	86	4	Hole 2.0	Hole 2.0
4.0 m	2000	4	12	22	68	78	86	5	Hole 2.0	Hole 5.0
km/h			9	8	10	12	15		543	2 1
Output rate 35 kg/ha										
Slide opening 2.5 m			32	35	38	41	46			
Slide opening 3.0 m			34	37	41	45	51	+	101	
Slide opening 4.0 m			36	39	42	47	53	V	3 4 5	
Please note that these are guide values.	e guide values.									
These settings must be checked and, it necessary, aujusted by		essary, aujusteu		lield lest.						



Baffle settings "adjustable"	ls "adjust	table"							LEHNER SuperVario®	/ario®
			White	mustar	d/oil ra	White mustard/oil radish mix	×			
Delivery height: 1.00 m Last updated: 07/2015	0 m Last updat	ed: 07/2015			60	% white mus	60% white mustard/40% oil radish	il radish		
			Vane	setting (vane	Vane setting (vane from left to right)	ht)				
Working width	rpm	Vane 1	Vane 2	Vane 3	Vane 4	Vane 5	Vane 6	Notch	Casting blade 1	Casting blade 2
3.0 m	750	1	11	21	69	62	89	4	Hole 1.5	Hole 5.0
4.0 m	1500	4	14	24	67	27	06	4	Hole 3.0	Hole 4.5
km/h			9	8	10	12	15		543	2 1
Output rate 15 kg/ha										1
Slide opening 3.0 m			23	25	27	30	34		10.	1
Slide opening 4.0 m			24	26	28	31	35	1	10-	
Please note that these are guide values.	e guide values.								3 4 5.	
These settings must be checked and, if necessary, adjusted by	necked and, if nece	essary, adjusted	by means of a field test.	field test.						©LEHNER



