



ORIGINAL INSTRUCTIONS

LEHNER LISA

Operating instructions control app

from version 1.8.0



LEHNER®
Streuen & Dosieren mit 12 Volt

Table of contents

1. Importing a spreader	3
2. Connecting to the spreader	3
2.1 Renaming a spreader	3
3. App settings	4
4. Spreader settings	4
5. Managing products	5
5.1 Add product	5
5.2 Edit product list	5
6. Fast settings	6
7. Operating the spreader	6

Last update 02.2023

If you have any questions, please contact us:

LEHNER Maschinenbau GmbH

Häuslesäcker 14


D-89198 Westerstetten

Tel.: +49 7348 9596-22

Fax: +49 7348 9596-40


e-mail: info@lehner.eu

1. Importing a spreader

To link up to a LEHNER spreader having LISA functionality, first scan the QR code on the device and establish an active connection . The WiFi address of the spreader will then be permanently listed in the WiFi menu of your smartphone can be selected directly.

Definitely to note:

- You must enable location sharing for the LISA app in your smartphone settings.
- You cannot use the internet with the spreader's Wi-Fi.
- You can use the phone at any time!
- When the spreader and the LiSA app are connected for the first time, the spreader will be named in the app as „spreader“ without further characteristics. To ensure a clear assignment, a clear name should be assigned: e.g. spreader name + container size or vehicle (see 2.1).

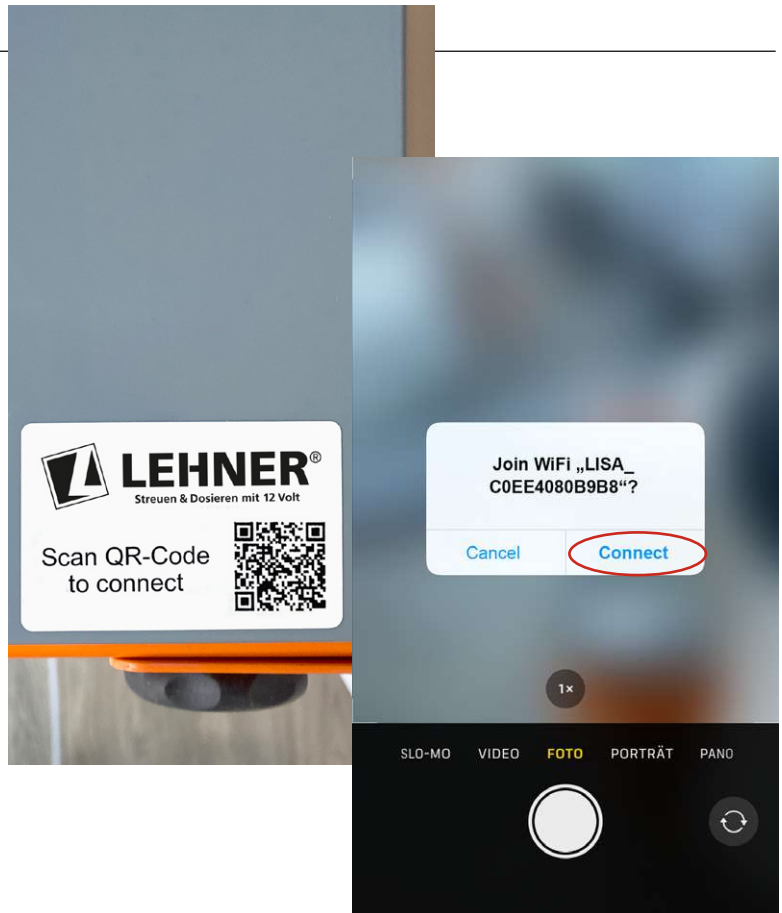


2. Connecting to the spreader

As soon as you open the app, it attempts to establish a connection to the active spreaders that it already knows. Alternatively, select them from the WiFi list. If the app does not recognise the spreader immediately, close the app and open it again.

-Refresh button


The search for known spreaders in your WiFi list begins automatically, but you can also do this manually.

-Connect/Forward button

Confirm the spreader connection, and go immediately to the app user interface, which has a main menu for spreader settings, product management, etc. Access to the main menu  is only possible with an active spreader connection.

2.1 Renaming a spreader

Press and hold the device name to open a pop-up window, where you can edit its name. The change of name is stored locally on your smartphone.

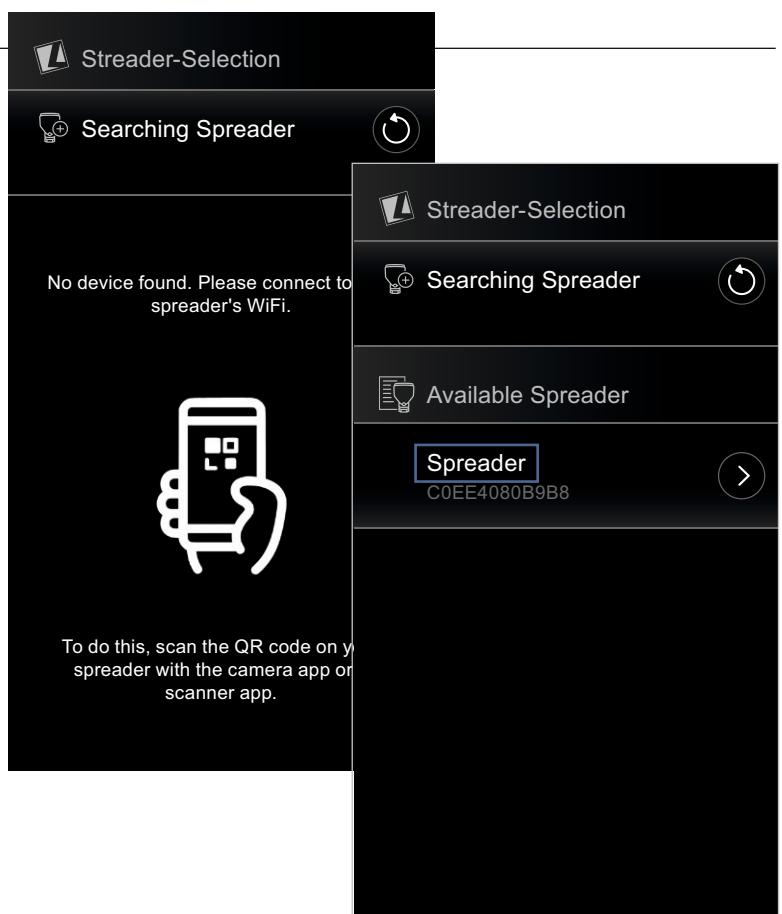

3. App settings


Higher-level settings for general use of the app and the desired features can be enabled and disabled individually. Your chosen app settings have no effect on spreader control.

Important instructions:

- All text shown in the app is automatically translated into your chosen language via Google Translate. The language can be changed at any time.
- The volume can be adjusted only if acoustic warning is enabled!

Default settings: 



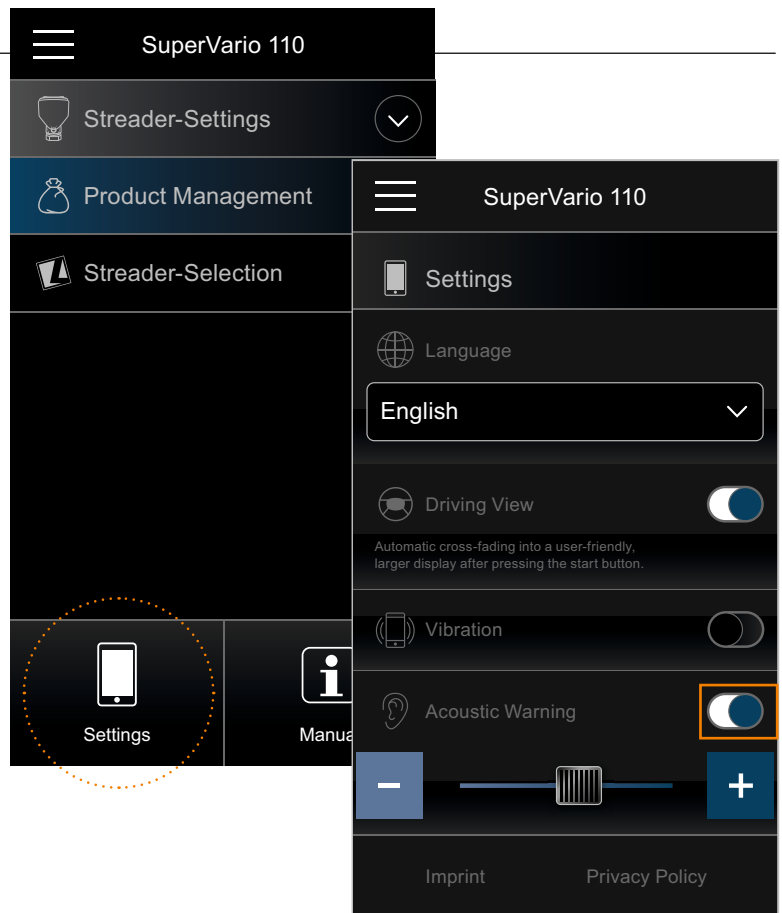




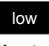



- The language which you selected when using the app for the first time
- Auto-Drive mode “on”
- Acoustic warning and vibration “off”




4. Spreader settings

Spreader settings are entered individually for each spreader, and are automatically stored locally in your app. However, you can view, check and adapt the values of the currently connected spreader only, at any time.

The most important elements at a glance:

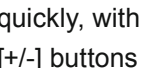- Pull-down-buttons   to show and hide the settings menu
- The -button takes you directly to the corresponding setting level/function
- Close button 
- Enable function: on  / off 
-   Direct selection via buttons
- Enter via touch function 
-  Slider control for setting values quickly, with fine adjustment increments via 

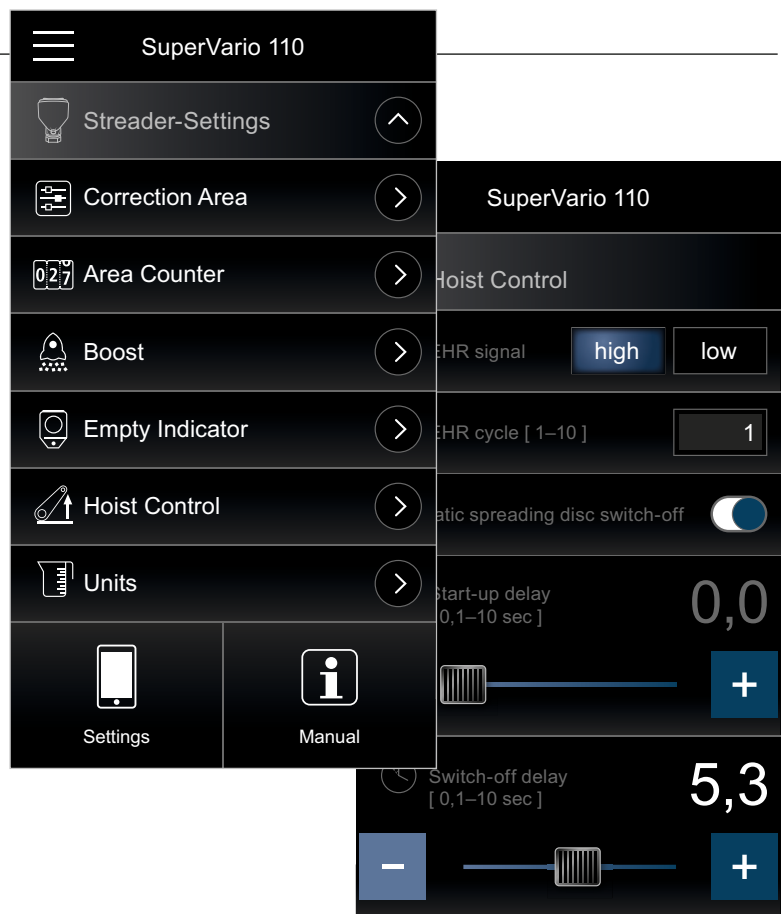

5. Managing products

5.1 Add product

Press the ➤-button to go to product management. Select + “Add product”. Assign the product a name, category and dosage quantity, and complete with Fast Settings. You can make changes at any time. “Expert mode” is planned but not yet active.

Please note the colour coding:


The colour coding indicates the current status. Unrecorded fields are outlined in **orange**. Fields where values have already been changed are framed in **light blue** until they are saved. The frame colour then changes to **light grey**.

Product data are specific to each spreader and are stored on the device itself. If you access the same spreader with another smartphone, the identical products (name and category) will be displayed.



To edit products that have already been saved, press the ➤-button and the input mask filled out with the previous data will appear immediately. All input fields are framed in light grey. Fields with changed values are then displayed in light blue again until they have been saved again (press ✓).

5.2 Edit product list

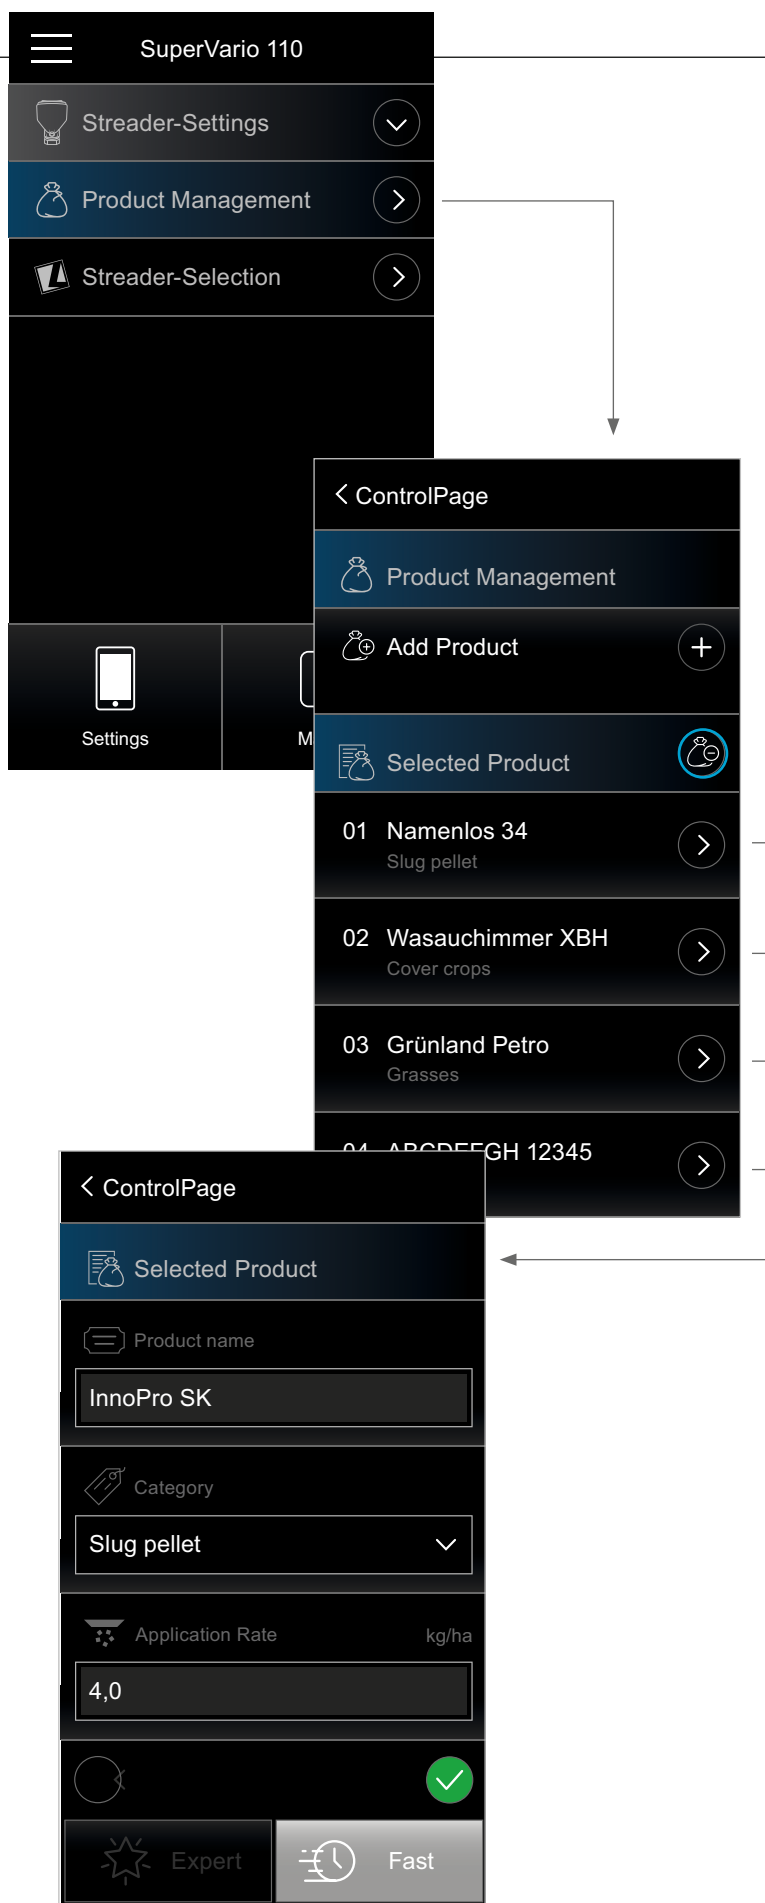Pressing the ⚙-button releases the list for editing. Then simply select the product to be deleted - confirm or cancel, done! The product list is then updated and renumbered.





6. Fast Settings

First enter the working width and rotational speed, confirm with  (The -button is inactive until all entries have been made).

Then proceed with the initial settings in the set order – start the calibration test, weigh and enter the quantities. Relevant data and information can be stored as a Note.

Important Note:


A product is added to the list only when the entire process is complete and all values have been entered and definitively stored. The timer  can be reset if the measurement needs to be repeated. The -button can be used to return to the previously saved input page.

Colour codes for entries:


Orange – fill out

Light blue – entered

Light grey – saved

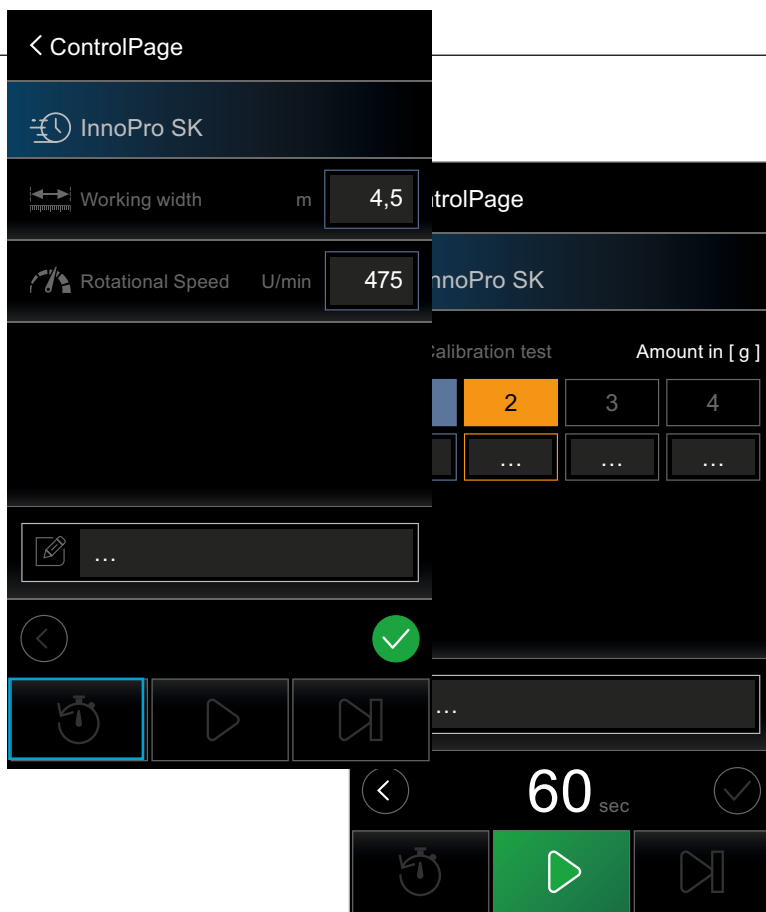

7. Operating the spreader

All the important functions and controls can be accessed and controlled centrally using the main screen. If Auto-Drive mode is enabled, this is displayed approx. 2 s. after you press the Start button, and can be closed with .

Shift keys from left to right:

Day/Night mode; EHR and AUTO-DOSIS/Manual

Assign memory keys:

Press and hold the M button (M1-M4) for 3 s. to save current values.

Work light/rotating beacon

If LEHNER additional lights are connected, they are automatically recognized and can be switched on and off via the app.

Auto-Drive mode

In order to make operating the spreader even more convenient while driving, the Auto-Drive mode has been reduced to the most important components with maximum size.



Main screen of the app

Auto-Drive mode